



1

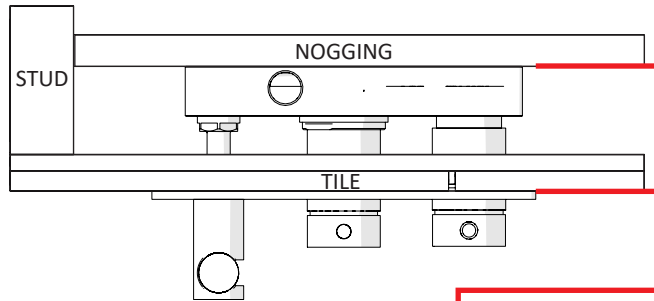

Adjustment Range
61mm-73mm


2

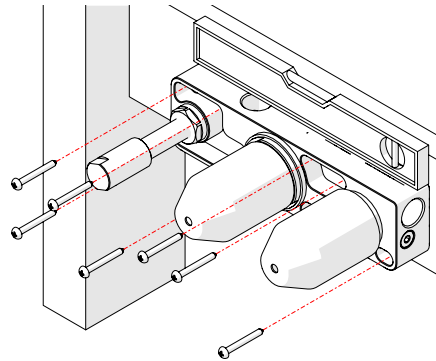

Screw the Mixer Breach onto Nogging to dimensions shown in adjustment range.

Ensure that the mixer body is level.


3

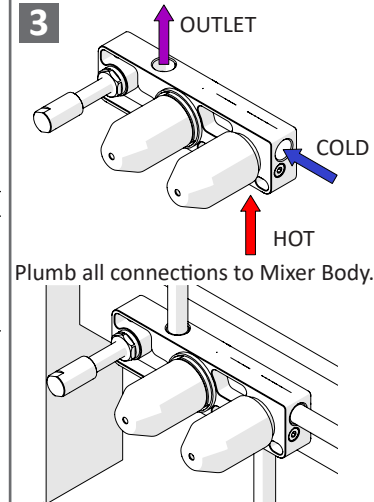

Plumb all connections to Mixer Body.


Ensure wall outlet fitting is capped. Perform **PRESSURE TEST** and check for leaks.

4

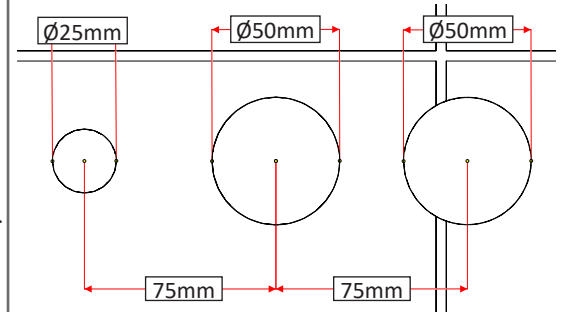


Check centre distance of the breach assembly is 75mm. Create a 25mm hole and two 50mm hole on the sheet and tiles, as shown.

5

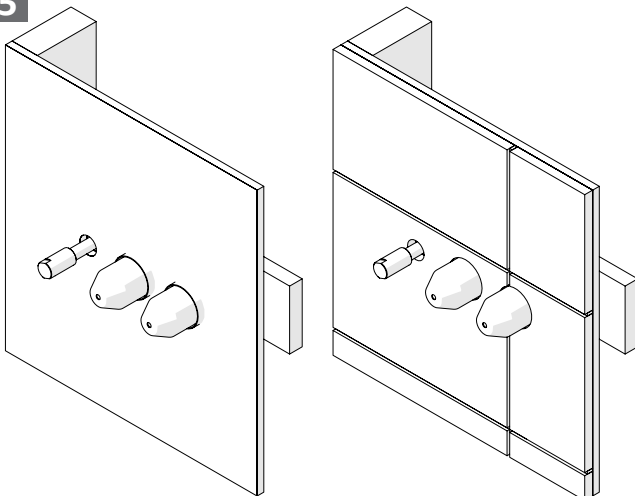


Cement sheet, waterproof and tiles as shown.

6

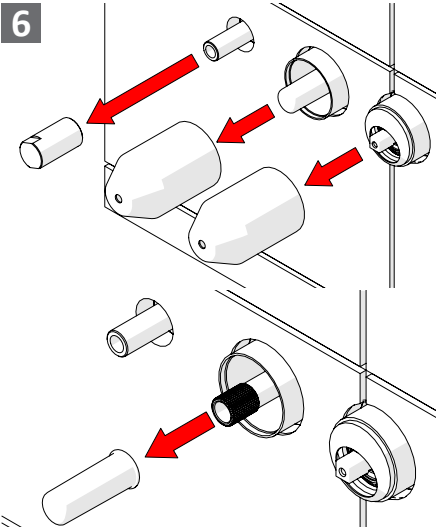


Remove protective covers as shown.

7

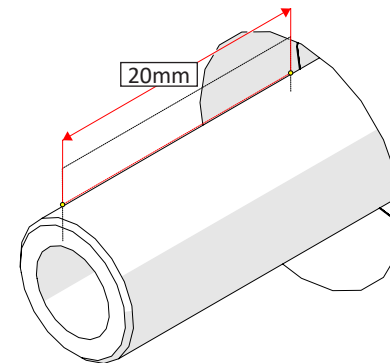

Ensure no more than 20mm of threaded tail is protruding from the tile face. If greater, trim to size.

8

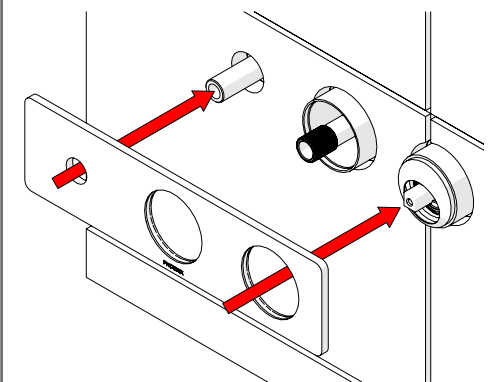

Push the dress plate over both sleeves.



recommended
working pressure

**150-
500KPa**

maximum hot
water temperature



**75
degrees**

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
 - Gravity-fed water systems
 - Some instantaneous hot water systems; or

- Pressure supply less than 150kPa;

NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

For tapware, any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:


- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.


*All measurements are shown in millimeters.

9

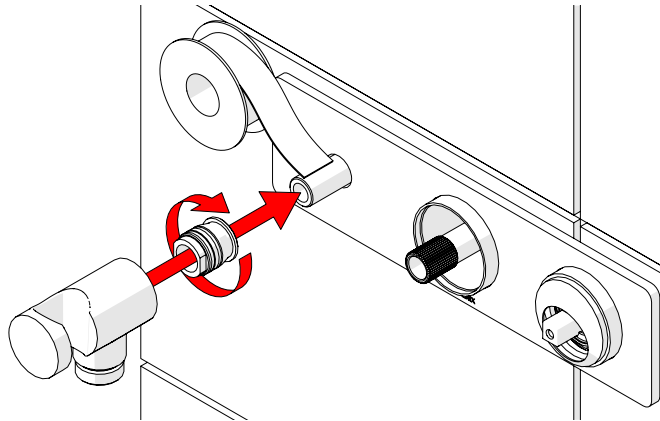


Apply Teflon tape onto the Thread. Tighten Hand Shower Adaptor onto thread. Push the Cradle on as shown.

10

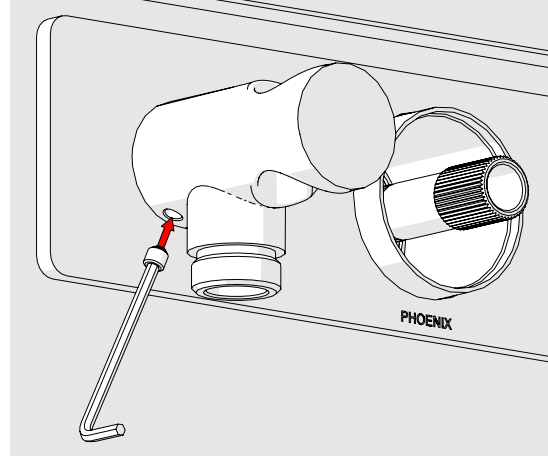


Tighten both Cradle grub screws firmly.

11

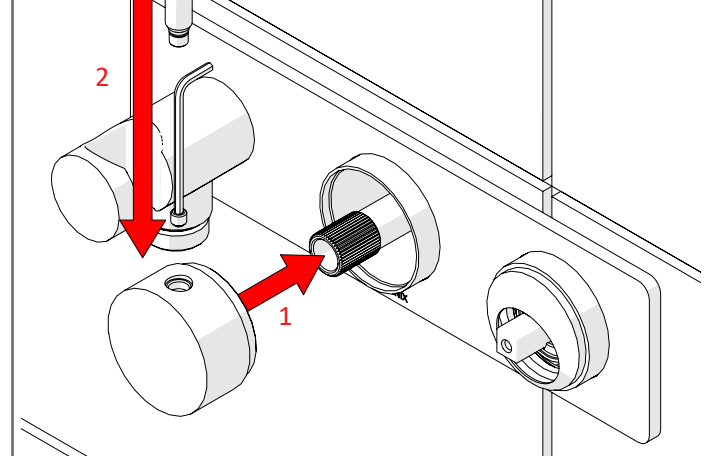


Push Diverter Handle onto the Spline. Tighten grub screw, then fasten the Diverter Pin, tightening firmly. DO NOT OVERTIGHTEN.

12

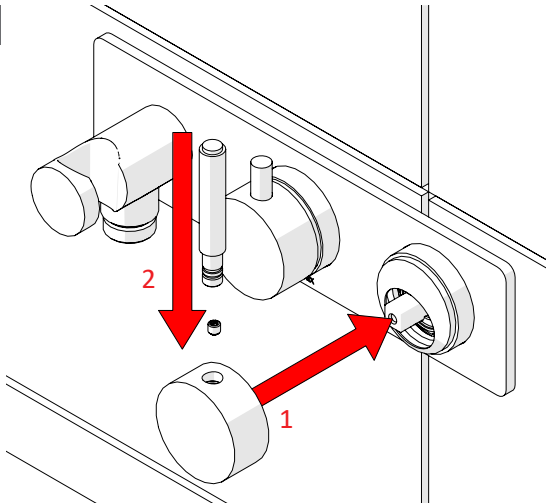


Push Mixer Handle Body onto the Cartridge, then insert the grub screw, tightening firmly. Insert the Pin into the hole, and tighten firmly.

13

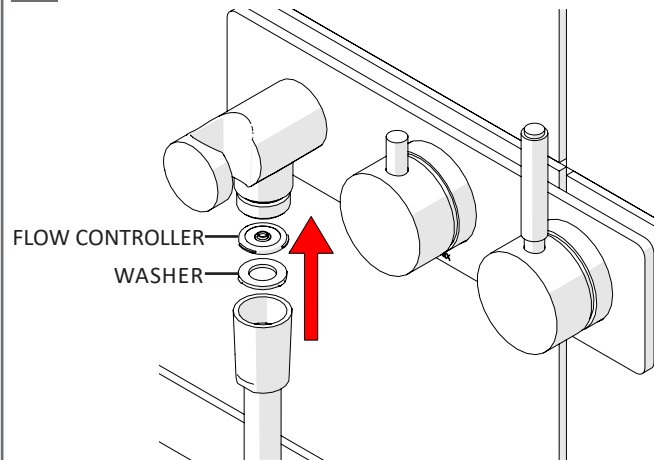

Attach the hose to the Cradle and ensure Flow Controllers are installed as shown.

14

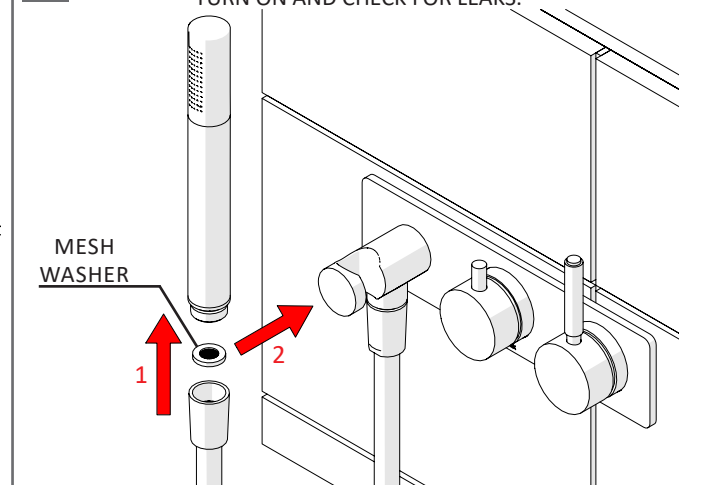

Attach the Handpiece to the hose.
TURN ON AND CHECK FOR LEAKS.

NOTE: Where showers incorporate flow controllers, instructions that care be exercised during installation to ensure that the male connecting threads do not damage the flow controllers.



recommended
working pressure

**150-
500KPa**



maximum hot
water temperature

**75
degrees**

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements.
- Showers may not be suitable for use within:
 - Gravity-fed water systems
 - Some instantaneous hot water systems; or

- Pressure supply less than 150kPa;

NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

For tapware, any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.