


1

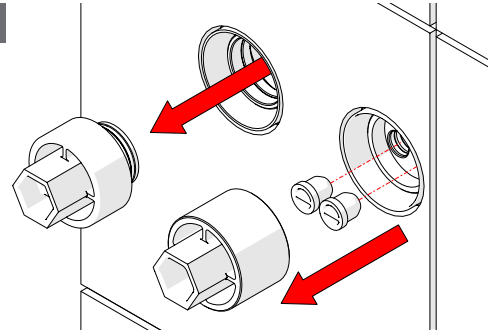

Remove Test Caps with a flat head screwdriver or spanner.


Ensure that no Test Plugs are in Body.

2

Add grease or soap to Cartridge Legs. Push Cartridge gently into Body. Ensure correct orientation.

Cartridge only fits in one orientation.


Firmly fasten Cartridge Sleeve to Mixer Body using a 1" tube spanner.

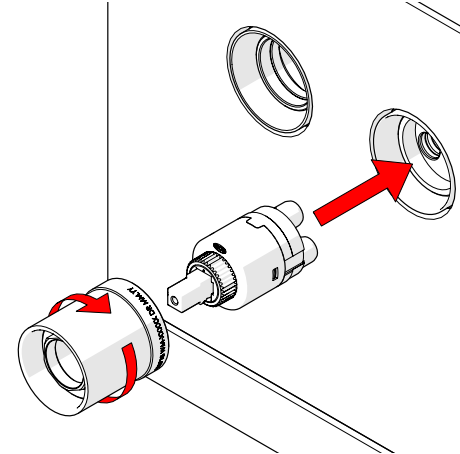

3


Insert Diverter cartridge into the in-wall body, then tighten the Locknut using a tube spanner.

Screw Diverter Sleeve over the top, and push on the Spline Adaptor, fastening the screw using an Allen Key.

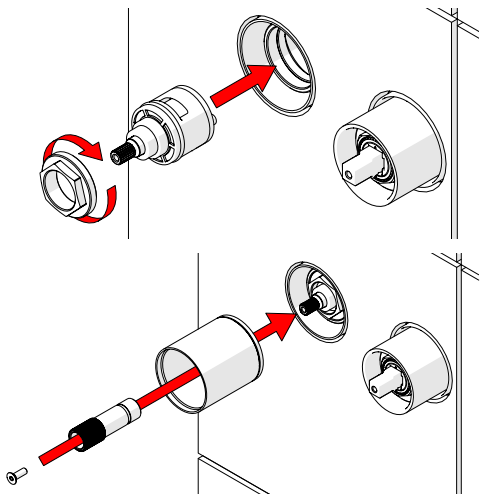

4


Gently push both Dress Plates onto sleeves.

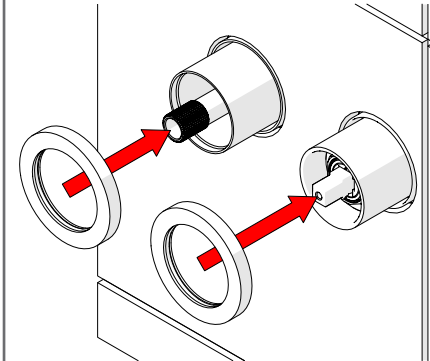

5

Attach Handle to Mixer Assembly. Fasten Grub Screw firmly with allen key supplied.

Insert Pin and screw firmly in place.

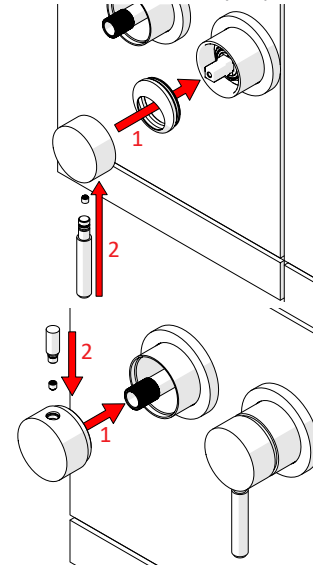


CARTRIDGE REPLACEMENT

Removing Diverter:

- Remove the Diverter Pin
- Remove the Diverter Handle and Dress Plate
- Unscrew and remove the Diverter Sleeve
- Unscrew the Cartridge Locknut and remove the Cartridge
- Release the screw. Remove the spline adaptor

Installing Diverter:

- Repeat steps 3,4, and 5

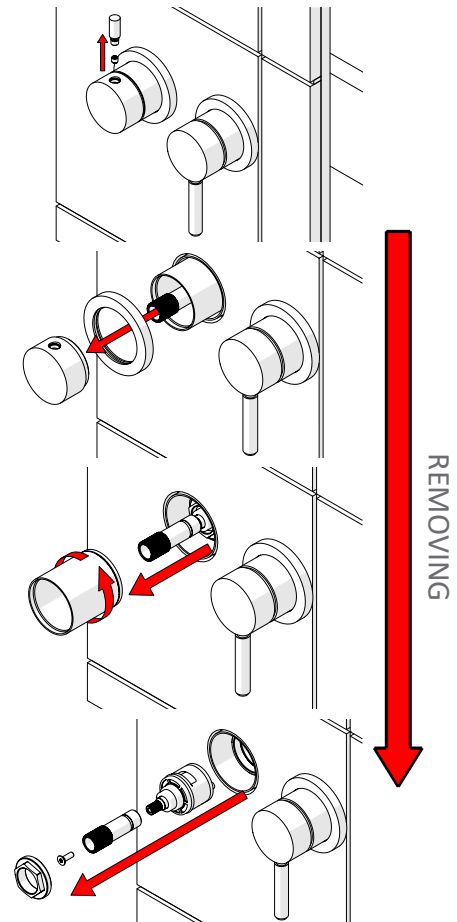

recommended working pressure

150-500KPa

maximum hot water temperature

75 degrees

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
 - Gravity-fed water systems
 - Some instantaneous hot water systems; or

- Pressure supply less than 150kPa;

NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

For tapware, any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.